

USER MANUAL



Manufactured in PRC
Special edition for AMP™



AMPGROUP.PRO

Subwoofer 12"

PROMO 150104V2

 Your AMP™ product was developed and manufactured with high-quality materials and components which can be recycled and/or re-used. This symbol indicates that electrical and electronic equipment must be disposed of separately from normal garbage at the end of its operational lifetime. Please dispose of this product by bringing it to your local collection point or recycling centre for such equipment. This will help to protect the environment in which we all live.

We respect your choice for choosing AMP™.
AMP™ company does everything possible
to ensure that our products meet your needs,
and quality match the best world standards.

CONTENTS

Guideline	2
Specifications	3
Dimensions	4
Wiring Subwoofer	4
Recommended Enclosures	5
Warranty Repair	10

Guideline

The correct choice of the Amplifier, its settings and enclosure design prolongs the lifetime of your Subwoofer. You should select a Power Amplifier with a rated power (RMS) 1,5-2 than the rated power of the Subwoofer — this will allow the Amplifier to have a margin of undistorted power. Proper coordination of the Head Unit with the Amplifier will provide a clean, undistorted signal fed to the Subwoofer, which prevents overheating and voice coil damage.

Important! We strongly recommend that the moving parts of the Subwoofer should be warmed up at the beginning of operation.

Warm up the Subwoofer using musical material for 50 hours at medium power.

Recommended settings.

Volume of Head Unit should not exceed 80 %.

GAIN (the Amplifier sensitivity) — 50 %.

Subsonic (subsonic filter frequency) should be set to 5 Hz below the port settings (for example, if you configure the port at 35 Hz, Subsonic should be set to 30 Hz). LPF (low-pass filter) — 63–80 Hz.

Bassboost — 0.

WE RESPECT YOUR CHOICE!

Congratulations on your purchase!

The AMP™ products designed, engineered and manufactured to bring you the highest level of performance and quality, and will afford you of listening pleasure.

AMP™ — ENERGY OF SOUND!

Specifications

Diameter	10" (255 mm)
Impedance	4 Ω
Nom. power	150 W
Sensitivity	85 dB
Frequency response	35 Hz – 1500 Hz
Magnet	∅120x20 mm Y35 Ferrite
Voice coil	1 3/8" (35 mm)
Cone	PP
Surround	Rubber
Basket	Steel


Parameters

Fs (Hz)	35
Qms	4.018
Qes	1.313
Qts	0.8
Rms (kg/s)	4.71
Cms (mm/N)	0.20
Mms (gr)	74
BL (N/A)	8.3
Vas (L)	42.1
Re (Ohms)	3.5
Sd (Sq.cm)	337
Xmax (mm)	7

All specifications subject to change without notice.

Dimensions

	"	mm
A	10.35	263
B	9.76	248
C	9.13	232
D	3.86	98
E	4.49	114

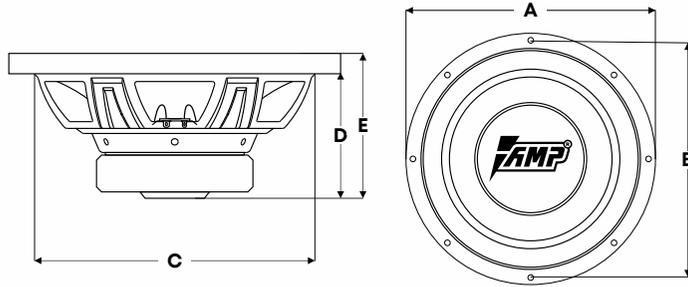


Wiring Subwoofer (s)

One subwoofer




Serial connection of subwoofers

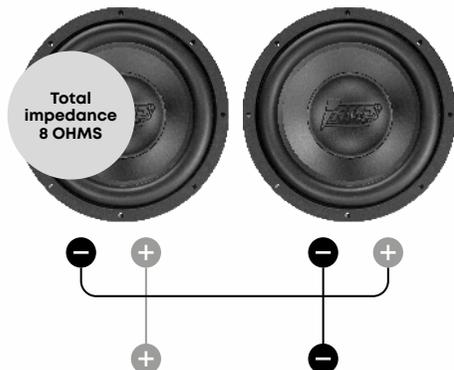

Parallel connection of subwoofers





Recommended Sealed Enclosures

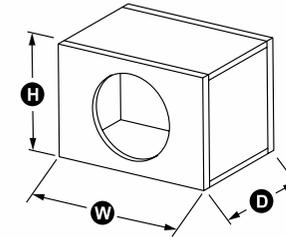

Volume (net int.)	External Dimensions (W x H x D)	F3	Qtc
15.4 L	390 x 300 x 210 mm	47.6 Hz	0.9

Recommended Ported Enclosures

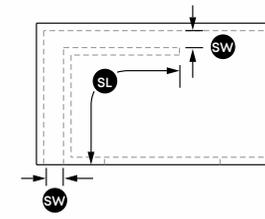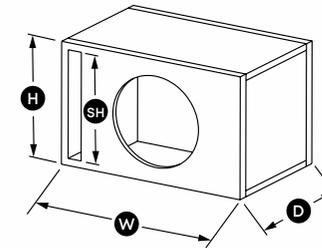

Volume (net int.)	External Dimensions (W x H x D)	Slot Port Internal Dimensions (SW x SH x SL)	F3	Fb
23.9 L	530 x 300 x 262 mm	30 x 264 x 490 mm	40.9 Hz	43.4 Hz

- The enclosure recommendations listed are external dimensions which assume the use of 18 mm thick material. If you are using 15 mm thick material, subtract 6 mm from each dimension. Do not use any material with a thickness of less than 15 mm as this may compromise the rigidity of the enclosure.
- All enclosure volumes listed are net internal volumes! Box volume displacement, port displacement and brace displacement must be added to obtain the final gross internal volume. All enclosure dimensions listed have already taken this into account.
- When using two subwoofers in a common enclosure simply double the required volume and, in the case of a ported enclosure, use two times the recommended port (s).



Never operate the subwoofer when it is unmounted. Attach all audio system components securely to prevent damage, especially in an accident.

Warranty period (operation)
Warranty period (storage)
Warranty service life

12 months
3 years
5 years

Operating temperature
Storage / transport temperature

+5...+30 °C
-40...+40 °C

СОДЕРЖАНИЕ

Рекомендации	6
Технические характеристики	7
Размеры	8
Подключение	8
Рекомендации по изготовлению корпуса	9
Гарантийные работы	11

Рекомендации

От правильного выбора усилителя, настроек и оформления во многом зависит срок службы Вашего сабвуфера. Необходимо подобрать усилитель мощности с номинальной мощностью (RMS) в 1,5–2 раза больше номинальной мощности сабвуфера — это позволит усилителю иметь запас в части неискажённой мощности. Правильное согласование головного устройства с усилителем позволит получить чистый, неискаженный сигнал, подаваемый на сабвуфер, что предотвратит перегрев и выход из строя звуковой катушки.

Важно! В начале эксплуатации настоятельно рекомендуем «размять» подвижные части сабвуфера. Элементы подвижной системы динамика не могут моментально включиться в работу, необходимо время, прежде чем центрирующая шайба звуковой катушки и подвес диффузора станут обладать соответствующей гибкостью и эластичностью. Мы рекомендуем около 50 часов «разминки» на мощности 50–60 %.

Рекомендуемые настройки.

Громкость головного устройства не более 80 %.

GAIN (чувствительность усилителя) — 50 %.

Subsonic (фильтр инфранизких частот) на 5 Гц ниже настройки порта (например, если настройка порта 35 Гц, Subsonic необходимо выставить на 30 Гц). LPF (фильтр низких частот) — 63–80 Гц.

Bassboost — 0.

МЫ ЦЕНИМ ВАШ ВЫБОР!

Поздравляем вас с покупкой!

AMP™ — это продукция высочайшего уровня производительности и качества.

AMP™ — ЭНЕРГИЯ ЗВУКА!

Технические характеристики

Диаметр	10" (255 мм)
Сопrotивление	4 Ω
Мощность номинальная	150 Вт
Чувствительность	85 дБ
Диапазон частот	35 Гц – 1500 Гц
Магнит	∅120x20 мм Y35 Феррит
Звуковая катушка	1 3/8" (35 мм)
Диффузор	Полипропилен
Подвес	Резина
Корзина	Сталь


Параметры

Fs (Hz)	35
Qms	4.018
Qes	1.313
Qts	0.8
Rms (kg/s)	4.71
Cms (mm/N)	0.20
Mms (gr)	74
BL (N/A)	8.3
Vas (L)	42.1
Re (Ohms)	3.5
Sd (Sq.cm)	337
Xmax (mm)	7

Производитель оставляет за собой право, без предварительного уведомления, вносить изменения в конструкцию изделия, не ухудшающие его потребительских свойств, с целью улучшения его технических характеристик.

Размеры

	"	ММ
A	10.35	263
B	9.76	248
C	9.13	232
D	3.86	98
E	4.49	114

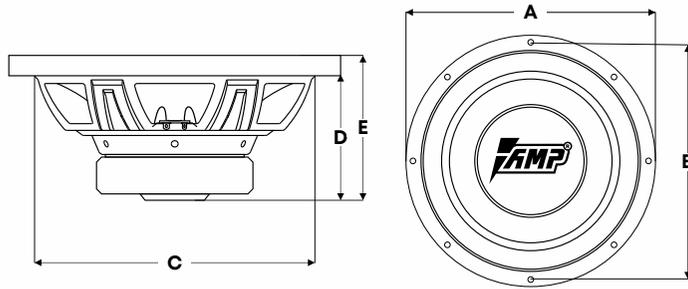


Подключение сабвуфера (ов)


Один сабвуфер




Последовательное соединение сабвуферов

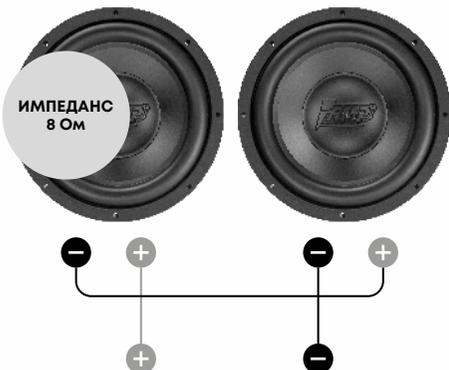

Параллельное соединение сабвуферов

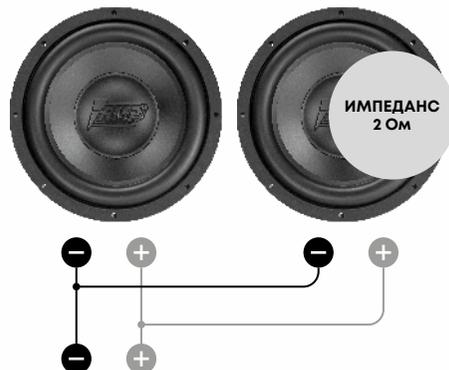


Герметичный корпус

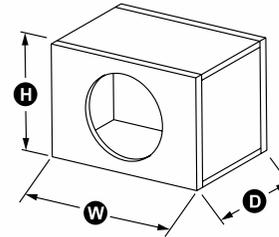

Объем	Внешние размеры (Ш x В x Г)	Частота среза	Добротность
15,4	390 x 300 x 210 мм	47,6 Гц	0,9

Корпус с портом фазоинвертора

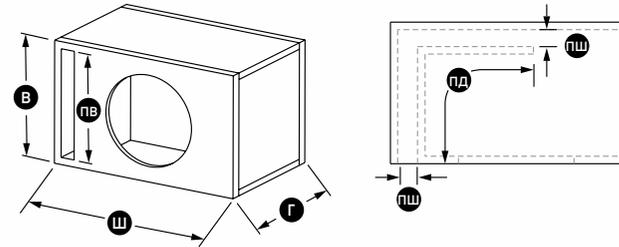

Объем	Внешние размеры (Ш x В x Г)	Внутренние размеры порта (ПШ x ПВ x ПД)	Частота среза	Частота резонанса
23,9 л	530 x 300 x 262 мм	30 x 264 x 490 мм	40,9 Гц	43,4 Гц

- Указаны внешние размеры корпуса для сабвуфера, с использованием материала толщиной 18 мм. Если вы используете материал толщиной 15 мм, вычтите 6 мм из каждого размера. Не используйте материалы толщиной менее 15 мм, так как это может снизить жесткость корпуса.
- Все перечисленные объемы корпуса являются чистыми внутренними объемами.
- При использовании двух сабвуферов в общем корпусе, увеличьте требуемый объем вдвое, а в случае портированного корпуса используйте два порта или порт увеличенного объема.



Сабвуфер должен быть надежно закреплен к месту установки. Все компоненты аудиосистемы так же должны быть надежно закреплены, чтобы предотвратить их повреждение во время движения автомобиля, особенно в случае аварии.

Гарантийный срок эксплуатации	12 мес.	Рабочий диапазон	+5...+30 °C
Гарантийный срок хранения	3 года	Хранение и транспортировка	-40...+40 °C
Гарантийный срок службы	5 лет		

INFORMATION ABOUT WARRANTY REPAIR

Service center

Work performed

Date

Stamp

Service center

Work performed

Date

Stamp

Service center

Work performed

Date

Stamp

ГАРАНТИЙНЫЕ РАБОТЫ

Сервис центр

Выполненные работы

Дата

Печать

Сервис центр

Выполненные работы

Дата

Печать

Сервис центр

Выполненные работы

Дата

Печать